



ALCA
ARIZONA LANDSCAPE
CONTRACTORS ASSOCIATION

Article Provided by:


**KANSAS STATE UNIVERSITY
FOUNDATION**

Pulling Trailers

Driving a vehicle with a trailer attached requires special training and knowledge. Before towing a trailer on the job, you should receive hands-on training to understand how the vehicle handles with an attached trailer.

Safe Hitching and Unhitching

- Check the operator's manual to make sure the towing vehicle is capable of pulling the load before you attach a trailer. The operator's manual for the tow vehicle and trailer will list the vehicle and trailer's towing weight limits. Weight limit information may also be found on the trailer's data plate.
- Stabilize the trailer before hitching by blocking the wheels so it does not accidentally roll over someone.
- Hitch and unhitch on level surfaces so the trailer does not roll.
- Make sure the trailer is properly hitched to the towing vehicle. Follow the directions in the operator's manual.
- Always attach safety chains and fasten the lighting connectors. The safety chain must be strong enough to hold the trailer securely if the primary hitch fails.
- Check the brake and signal lights on the trailer before driving.
- To prevent rolling, stabilize the trailer before unhitching by blocking the wheels. Place the blocks in the direction the trailer is most likely to roll. When you are unsure which way it might roll, block both front and rear wheels.

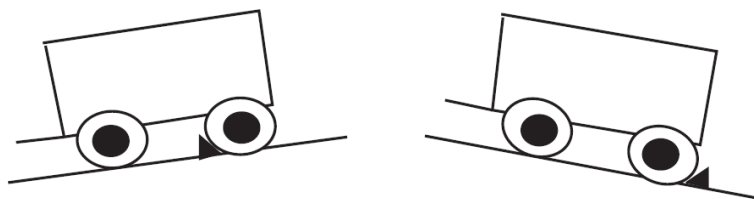

Arizona Landscape Contractors Association

5425 E Bell Rd, #105 Scottsdale, AZ 85254 • (602) 626-7091

www.ALCA.org



ALCA
ARIZONA LANDSCAPE
CONTRACTORS ASSOCIATION

**KANSAS STATE UNIVERSITY
FOUNDATION**

Tirando de remolques

Conducir un vehículo con un remolque adjunto requiere una formación y unos conocimientos especiales. Antes de remolcar un remolque en el trabajo, debe recibir capacitación práctica para comprender cómo se maneja el vehículo con un remolque adjunto.

Enganche y desenganche seguro

- Consulte el manual del operador para asegurarse de que el vehículo remolcador sea capaz de tirar de la carga antes de colocar un remolque. El manual del operador del vehículo remolcador y el remolque enumerará los límites de peso de remolque del vehículo y del remolque. La información sobre el límite de peso también se puede encontrar en la placa de datos del remolque.
- Estabilice el remolque antes de enganchar bloqueando las ruedas para que no vuelque accidentalmente sobre alguien.
- Enganche y desenganche en superficies niveladas para que el remolque no se mueva.
- Asegúrese de que el remolque esté correctamente enganchado al vehículo remolcador. Siga las instrucciones del manual del operador.
- Siempre coloque cadenas de seguridad y sujete los conectores de iluminación. La cadena de seguridad debe ser lo suficientemente fuerte para sostener el remolque de forma segura si falla el enganche primario.
- Compruebe las luces de freno y de señales del remolque antes de conducir.
- Para evitar que ruede, estabilice el remolque antes de desengancharlo bloqueando las ruedas. Coloque los bloques en la dirección en la que es más probable que ruede el remolque. Cuando no esté seguro en qué dirección podría rodar, bloquee las ruedas delanteras y traseras.

